Basic Manual

A1404SII

by Sony Ericsson

au by KDDI

Contents
Before use
Phone
Phone book
Mail
Camera
EZweb
FM radio
Infrared data exchange feature
Text input
Troubleshooting
Other features
Index

Welcome

Thank you for buying the A1404SⅡ. Before using your A1404SⅡ, read the A1404SⅡ Basic Manual (PDF manual) to ensure correct use of your A1404SⅡ. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe place so you can retrieve them whenever you need them.

If you lose any of these manuals, contact an au shop or an au Customer Service Center.

Printed manuals for A1404SⅡ (Japanese)

The A1404SⅡ comes with the Basic Manual and the Manual.

A1404SⅡ Basic Manual

Equivalent to this PDF manual.

A1404SⅡ Manual

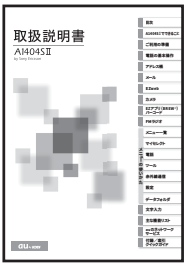

English version is not available.

The following manuals are also available from the au homepage:

- The downloadable Basic Manual and Manual
  (http://au-pro.kddi.com/phone/torisetu/index.html)
- The au online manual (Japanese) for searching by keyword
  (http://www.au.kddi.com/manual/index.html)

The au online manual (Japanese) is also available from the EZweb:

<To access>

(EZ)→ Top menu →料金・申込・インフォ → au オンラインマニュアル

Read the barcode (QR code) to access au online manual

The typeface and shape of fonts used in displays may differ from those used in actual displays or may be omitted.

Etiquette

Cellphone etiquette

■ Cellphones emit weak radio waves at all times even if you just turn the power on.
■ Enjoy and safely use your cellphone without forgetting those around you.

● Some places forbid the use of cellphones.

- Do not use a cellphone while you are driving. Doing so is dangerous and forbidden by law.
- Using a cellphone in an aircraft is forbidden by law. Turn your cellphone off.

● Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers.
  Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry a cellphone.

● Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries and other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being inconvenienced by the incoming ring.

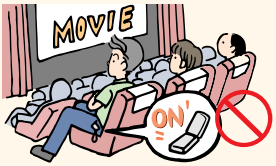

- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Do not talk too loudly during conversations.

- Get other people's permission before you start taking photos with the cellphone's camera.

Basics of the cellphone

What A1404SII offers

Mail

You can send mail to other cellphones or PCs.

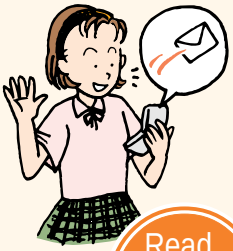

Read from page 37

Camera

You can easily take photos or record movies and send them by e-mail.

Read from page 52

EZweb

You can download data like Chaku-Uta™ and wallpaper.

Read from page 62

Infrared data exchange

You can send and receive data, like phone book entries and profiles, to and from other au cellphones that are equipped with the infrared data exchange feature.

Read from page 75

FM radio

You can enjoy FM radio easily.

Read from page 70

Manner mode and record message

Manner mode

You can use the manner mode to turn incoming rings and other tones off to prevent others from being inconvenienced.

Hold down (マナー) for at least one second in the idle display.

See page 28

Record message

You can play answer messages and record messages from other parties when you cannot answer a phone call.

Hold down (ボイメモ) for at least one second in the idle display.

See page 29

Check the power, radio waves, and battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.

Hold down (HOLD/電源) for at least one second.

See page 11

You cannot talk if you are not receiving "radio waves."

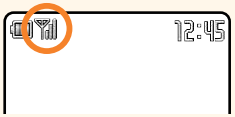

It is sometimes difficult to receive radio waves in some places even in service areas.

indicates the reception state.

See page 11

Pay attention to the remaining "battery" power.

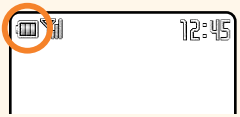

Sometimes the cellphone does not function properly if the remaining battery power is low.

indicates the remaining battery power.

See page 11

Do not use the cellphone while driving

It is banned to hold a cellphone in a hand and use it for a call or to gaze at a screen to see mail, etc. while driving.
(November 1, 2004 Implementation of the Revised Road Traffic Law enforcement)

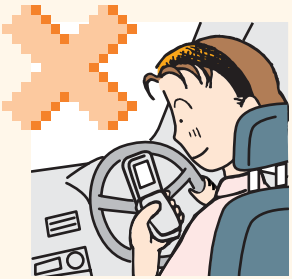

Gazing at the screen to see mail

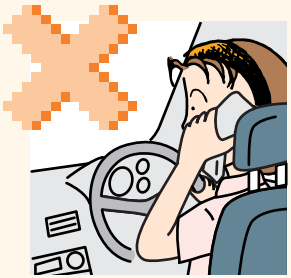

Holding the cellphone to talk

Use drive mode or turn the power off while driving

Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded on the record message.

Press (マナー) in the idle display, use and to select "Manner mode" → "Set" → "ON" → "Mode" → "Drive," and press (cmplt).

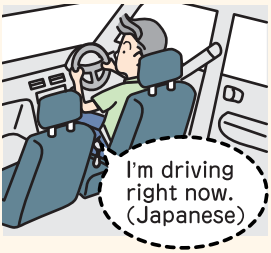

Watch out for spam and one-ring calls!

If you get incoming spam…

You can use the mail filter function to disable reception of just mail you specify or block mail indicated as "未承諾広告※" that contains lots of spam.

The following mail functions are available for preventing arrival of spam:

- "未承諾広告フィルター": To block spam
- "アドレスフィルター": To filter various addresses

  "指定拒否設定": To reject specified mail

  "指定受信設定": To receive only specified mail

  "なりすまし規制": To block mail from a spammer who pretends to be using a cellphone or PHS

See page 46

If you have an incoming call from an unknown number…

Such calls may be an invitation to you to return a call to services with very high charges. (This is a "one-ring call.")

The red icon is displayed in the Received display when you receive a one-ring call.

See page 24

Contents

Etiquette 1

Cellphone etiquette ... 1

Basics of the cellphone 2

What A1404SⅡ offers ... 2
Manner mode and record message ... 3
Check the power, radio waves, and battery! ... 3
Do not use the cellphone while driving ... 4
Use drive mode or turn the power off while driving ... 4
Watch out for spam and one-ring calls! ... 5

Contents 6

Before use 8

Checking the package ... 8
Names of parts ... 9
Charging the battery pack ... 10
Turning the power on/off ... 11
Default settings ... 11
Before using the English display ... 12
Learning the basics ... 12
Viewing the display ... 15
Initial settings for e-mail and EZweb ... 16
Confirming your cellphone number/e-mail address ... 17
Changing your e-mail address ... 18

Phone 21

Making a call ... 21
Receiving a call ... 22
Redialing the number you called (Dialed) ... 23
Redialing the number you received (Received) ... 23
Filtering one-ring calls ... 24
Changing the volume during a call ... 25
Changing the volume and tone of the incoming ring ... 26
Setting the manner mode ... 28
Setting record message ... 29
Playing back recorded messages ... 30

Phone book 31

Saving new data ... 31
Making a call from the phone book ... 33
Editing saved data ... 34
Saving a received call ... 36

Mail 37

Using e-mail ... 37

Creating and sending e-mail 38
Opening a received e-mail 41
Replying to a received e-mail 44
Opening a received e-mail with a photo or movie attached 45
Filtering spam 46
Using C-mail 47
Creating and sending C-mail 48
Opening a received C-mail 50

Camera 52

What you can do with this camera 52
How to hold the camera 53
Taking photos 54
Recording movies 56
Viewing photos you have taken 58
Viewing movies you have recorded 59
Attaching a photo or movie to e-mail 60
Photo mail 61

EZweb 62

EZweb 62
Viewing information sites 63
Saving your favorite sites 65
Viewing a site saved to the Favorite list 66
Confirming your call costs 67
Downloading a Chaku-Uta™ 68

FM radio 70

How to listen to the FM radio 70
Listening to the FM radio 72
Suspending/ending the FM radio 74

Infrared data exchange feature 75

Using the infrared data exchange feature 75
Using the infrared data exchange feature to send data 77
Using the infrared data exchange feature to receive data 78

Text input 79

Changing the character mode 79
Text input 80

Troubleshooting 83

Disaster Message Board Service 84

Other features 86

Index 87

Before use

Checking the package

The package contains the main unit and accessories.

- Main unit

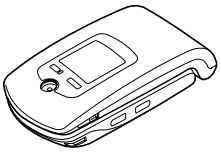

- Battery pack (inside the main unit)

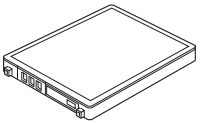

- Sony Ericsson AC adaptor 02

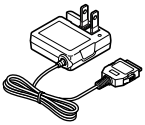

- Desktop holder

- Sony Ericsson flat-type stereo earphone microphone

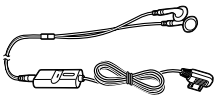

* Attach accessory ear pad to earphone microphone

- Basic Manual (Japanese)

- Manual (Japanese)

- Warranty (Japanese)
- Safety Precautions (Japanese)

Names of parts

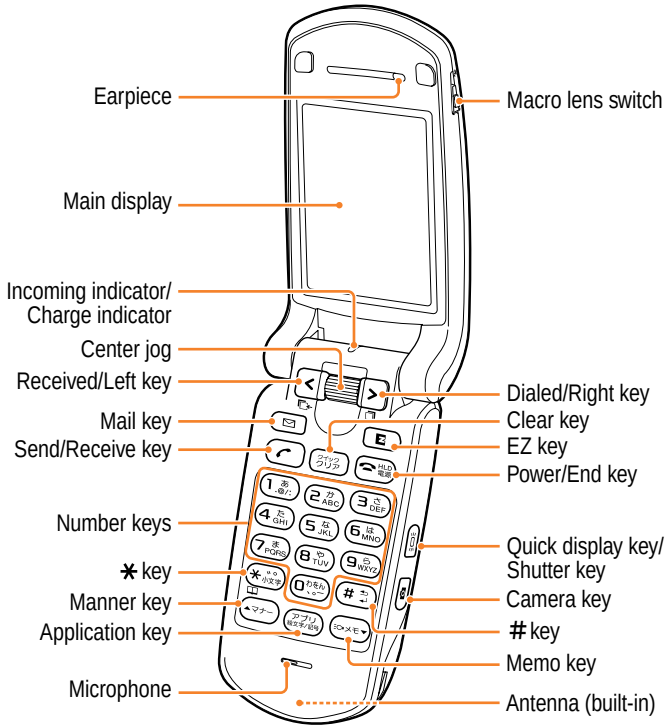

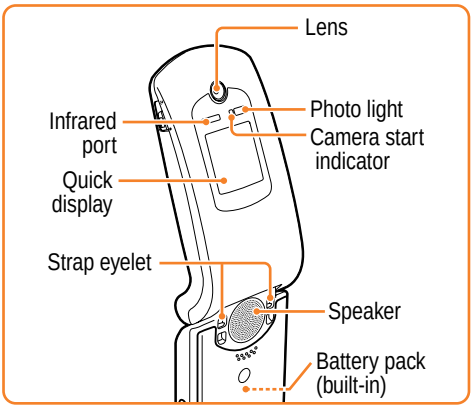

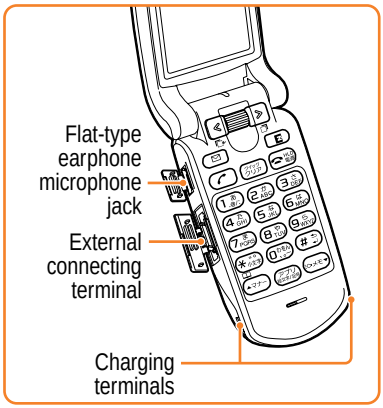

Charging the battery pack

The battery pack is insufficiently charged at the time of purchase. Charge the A1404SII before using it.

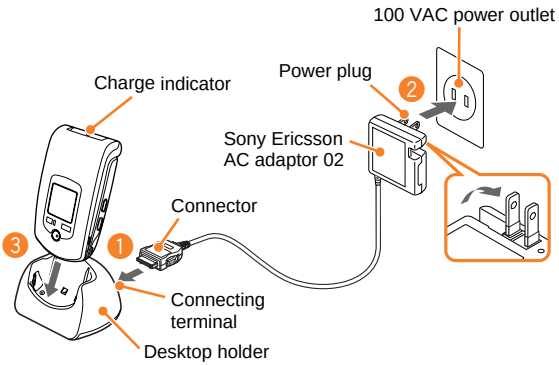

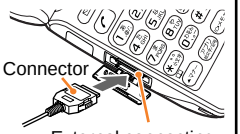

You can also charge the battery pack by directly connecting the Sony Ericsson AC adaptor 02 to the A1404SII. (Check the shape of the connector.)

- The charge indicator lights red: The battery pack is being charged.
- The charge indicator turns off: Charging is finished.

1 **Connect the Sony Ericsson AC adaptor 02 to the desktop holder. (Check the shape of the connector.)**

2 **Fold out the power plug of the Sony Ericsson AC adaptor 02, and plug it into a 100 VAC power outlet.**

3 **Insert the closed A1404SII into a desktop holder.**

When charging with the desktop holder, the A1404SII needs to be folded up. If the A1404SII is charged while being opened, it may fall.

When removing the A1404SII, hold the desktop holder firmly and lift the A1404SII upward.

Turning the power on/off

1 Hold down HLD 電源 for at least one second.

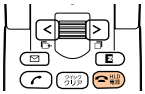

Check the remaining battery power.

Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.

Check the reception state.

Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls if "圏外" (Out of service area) is displayed.
- Sometimes you cannot receive or make calls if "" (Very weak) is displayed.

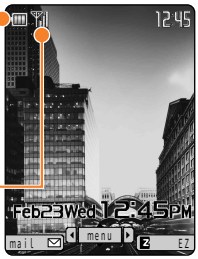

(idle display)

To turn the power off

Hold down HLD 電源 for at least two seconds.

Default settings

The default settings are as follows.

Chg lockcode (change lockcode)	1234	Font size	Ordinary font: Large EZweb font: Small E-mail font: Large
Caller ID	ON		

Before using the English display

1 Press (メニュー) in the idle display, and use and to select (設定) → "画面設定."

2 In the 画面設定 display, use and to select "Set Language" → "English."

Learning the basics

Key operation

Center jog

Start with how to use and .

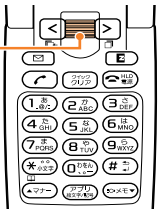

	Press the center jog
	Turn the center jog up or down

Soft keys

If the following items appear at the bottom of the display, press their soft keys; you can use the feature displayed for each soft key. The display varies depending on the screens.

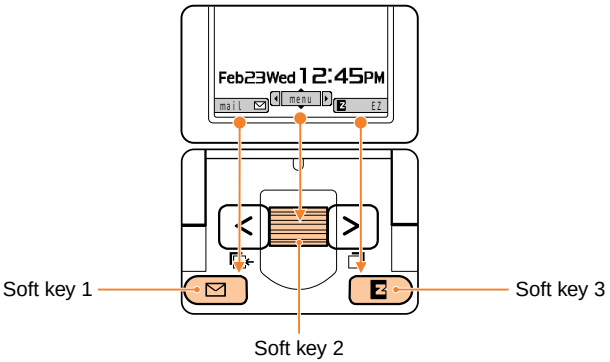

If you have made a mistake

If you are unsure of an operation or you have made a mistake, return to the previous display by pressing クイック クリア, or return to the idle display by pressing HLD 電源.

Using keys

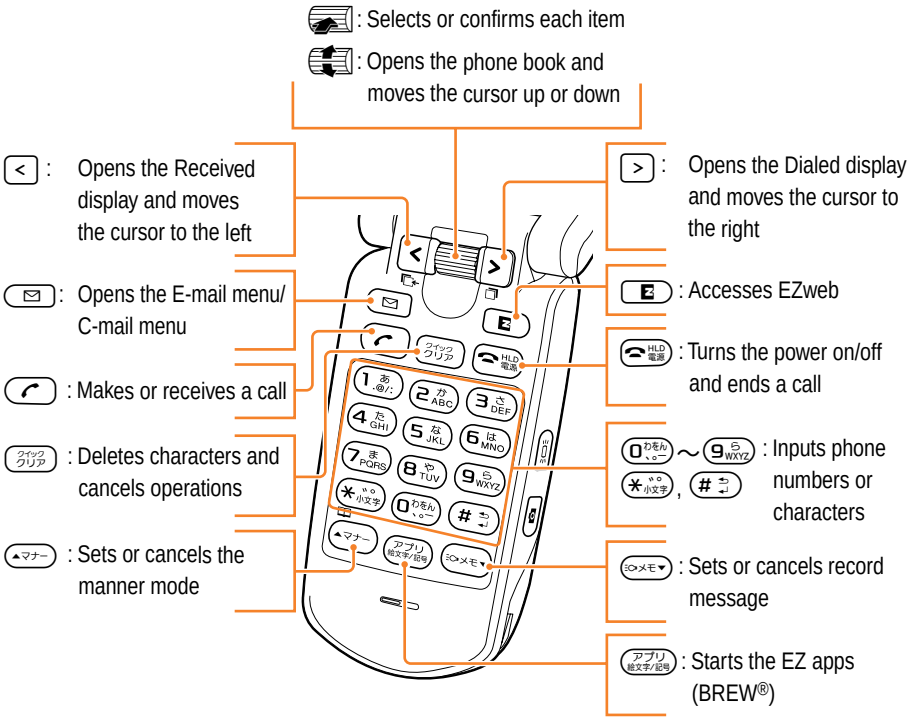
: Selects or confirms each item
: Opens the phone book and moves the cursor up or down
: Opens the Received display and moves the cursor to the left
: Opens the Dialed display and moves the cursor to the right
: Opens the E-mail menu/ C-mail menu
: Accesses EZweb
: Makes or receives a call
: Turns the power on/off and ends a call
: Deletes characters and cancels operations
: Inputs phone numbers or characters
: Sets or cancels the manner mode
: Sets or cancels record message
: Starts the EZ apps (BREW®)

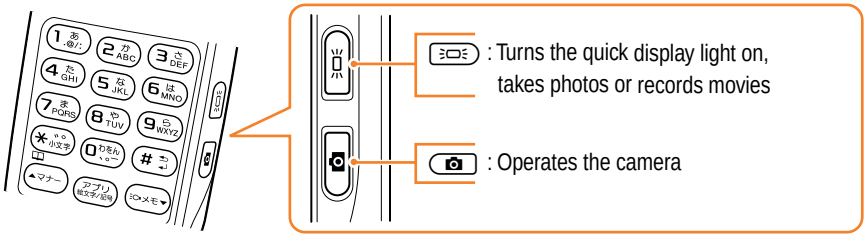
: Turns the quick display light on, takes photos or records movies
: Operates the camera

How to view the Index menu

Various menus on the A1404SII can be called up from the Index menu. Use and to operate the Index menu.

1 Press (menu) in the idle display.

⇒The Index menu appears.

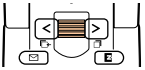

2 Turn to select the desired Index menu, and press (select).

⇒You can set each item in the Index menu you have selected.

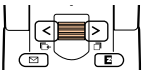

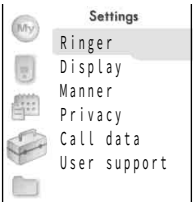

If you have made a mistake, press (クリア). You can cancel the operation or return to the previous display.

The Index menu contains the following functions.

(MySelection)	Saves any combination of menu items to suit your preferences
(Phone)	Handy features such as the phone book, call list or voice memo when making calls
(Tool)	A schedule, memo, calculator, etc.
(Settings)	Sets Ringer, Display, and other settings
(DataFolder)	Saves various data by category for later use

Other than the above, various functions are available in the Index menu.

Viewing the display

You can check arrival of mail, function settings and other information by icons.

Main icons

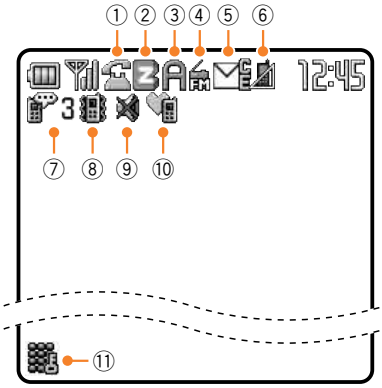

	Icons	Meanings
①		Call in progress
②		EZweb in use
③		EZappli in execution
④		FM radio being received
⑤		Received or unread mail
⑥		Missed call
⑦	3	Record message is set, Number of recorded messages (1-3)
⑧		Vibrator on
⑨		Ring volume off
⑩		Manner mode is set
⑪		Keypad is locked

How to view the quick display

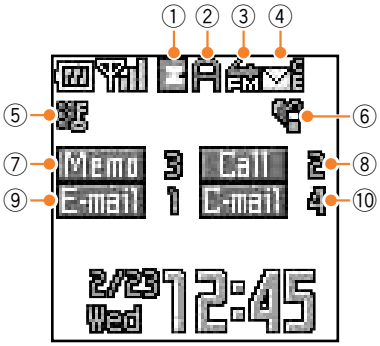

	Icons	Meanings
①		EZweb in use
②		EZappli in execution
③		FM radio being received
④		Received or unread mail
⑤		Keypad is locked
⑥		Manner mode is set
⑦	Memo 3	Recorded message that you have not listened to, Number of recorded messages
⑧	Call 2	Missed call, Number of missed calls
⑨	E-mail 1	Received e-mail, Number of messages
⑩	C-mail 4	Received C-mail, Number of messages

Initial settings for e-mail and EZweb

You need to subscribe to the EZweb service to use the e-mail, EZweb, EZappli (BREW®) and FM radio. Contact an au shop or an au Customer Service Center if you did not subscribe to the service at the time of purchase.
Do initial settings before using the e-mail and EZweb services.
Initial settings automatically determine your e-mail address.
To change that e-mail address to your preferred address, see page 18.

Skip this section if you are not going to use either e-mail or EZweb.

1 Press (mail), (EZ) or (アプリ 絵文字/記号) in the idle display.

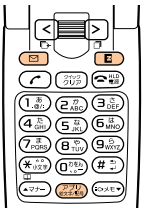

EZwebを利用するための初期設定を行います
「OK」を押してしばらくお待ちください

2 Press (ok).

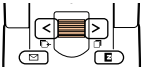

ただいま初期設定を行っています。

しばらくお待ちください。(30秒～1分程度かかります)

Wait a short while until the display on the right appears.

ようこそEZwebへ
お客様のEXメールアドレスは、
△△△@ezweb.ne.jp
です。
-ヒント-
「申込」を押すと申込み手続きを開始します。

3 Press (ok).

⇒The screen that appears is different depending on the key pressed on the step 1.

Start by (mail)

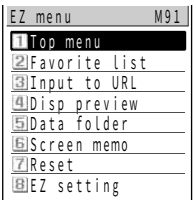

Start by (EZ)

Start by (アプリ 絵文字/記号)

Confirming your cellphone number/e-mail address

1 **Press (menu) in the idle display.**

⇒The Index menu appears.

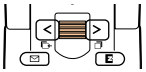

2 **Turn to select (Phone), and press (select).**

⇒The Phone menu appears.

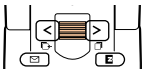

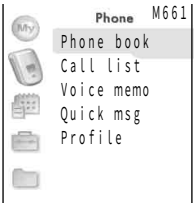

3 **Turn to select "Profile," and press (select).**

⇒The profile display appears so that you can confirm your cellphone number and e-mail address.

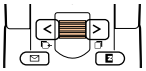

You can also confirm your cellphone number and e-mail address by pressing (menu) and (わをん) in the idle display.

Your e-mail address is automatically determined when you make the initial settings. You can also change to an e-mail address you like (see page 18).

Changing your e-mail address

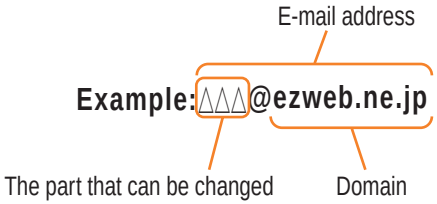

1 **Press (mail) in the idle display.**

⇒The E-mail menu appears.

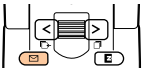

2 **Turn to select "Settings," and press (select).**

⇒The E-mail settings display appears.

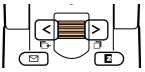

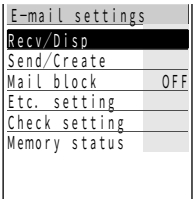

3 **Turn to select "Etc. setting," and press (select).**

⇒The Connect confirmation display appears.

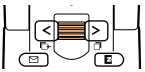

4 **Turn to select "Yes," and press (select).**

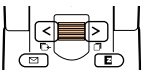

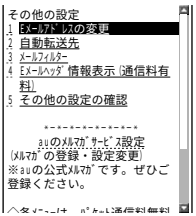

5 Turn to select "1 Eメールアドレスの変更," and press (Select).

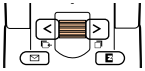

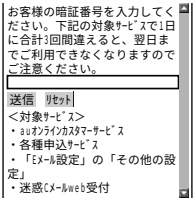

6 Turn to select the input field, and press (Edit).

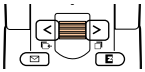

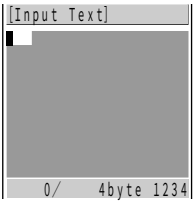

Security code is arbitrary 4-digit numbers that you filled in an application form at the time of contract.

Note that no setting operation is allowed for the rest of the day if you enter the wrong security code three times in one day.

7 Input your security code, and press (ok).

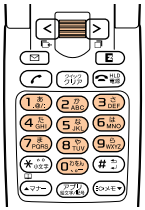

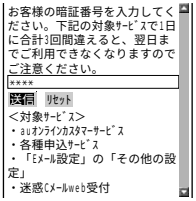

8 Turn to select " 送信 ," and press (Select).

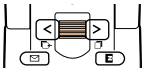

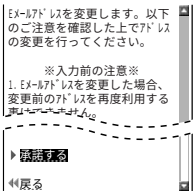

9 Turn to select " 承諾する ," and press (Select).

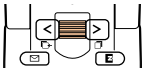

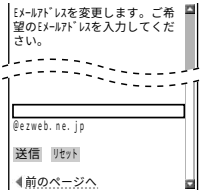

10 Turn to select the input field, and press (Edit).

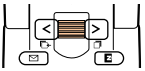

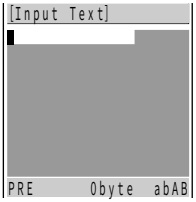

11 Input the section preceding @, and press (ok).

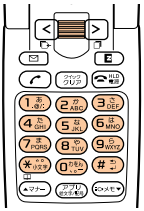

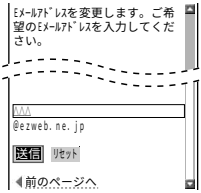

For details on how to input e-mail addresses (alphanumerics), see page 80.

12 Turn to select " 送信 ," and press (Select).

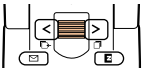

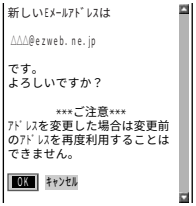

When an e-mail address cannot be changed

- The e-mail address that you inputted is already being used. Input a different e-mail address.
- Unsupported characters have been inputted. Use characters that are supported (See page 80).

13 Turn to select "OK," and press (Select).

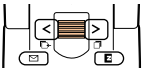

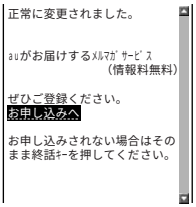

Pressing (OK) returns the display to the E-mail settings display.

Making a call

1 Press 0 to 9 to input the other party's phone number.

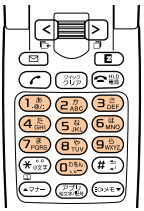

To call a regular phone, input the phone number starting with the area code.

To notify the other party of your cellphone number

Input "186" before the phone number.

Not to notify the other party of your cellphone number

Input "184" before the phone number.

2 Press .

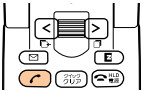

When you have finished the call, press .

Receiving a call

1 **Press (call) or (call) to answer the call.**

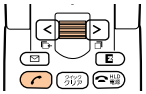

When you have finished the call, press .

Display when you have received a call

Phone number	The other party has set to notify Caller ID. If the other party's name is already saved in the phone book, that person's name is also displayed.
ID unsent	The other party has set not to notify Caller ID.
Payphone	You have received a call from a payphone.
Not support	You have received a call from a party that is not able to notify you of their phone number.

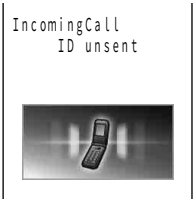

Display if you could not answer a call

If you could not answer a call, you are notified that you had a call on the display. If you press (confm), you can confirm the phone number of the other party that called you and redial that party.

Redialing the number you called (Dialed)

1 **Press [>] in the idle display.**

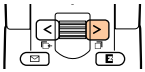

⇒The Dialed display appears.

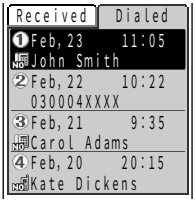

The Dialed display can hold the last 30 phone numbers you called in sequence from the most recent.

2 **Turn [dial] to select the phone number you want to call, and press [call] .**

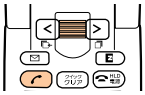

⇒The call is connected to the phone number you selected.

Redialing the number you received (Received)

1 **Press [<] in the idle display.**

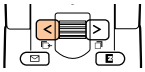

⇒The Received display appears.

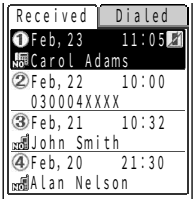

The Received display can hold the last 30 phone numbers you received in sequence from the most recent.

Icons

(blue): When you were not able to answer an incoming call

(red): When the other party discontinued the call in less than three seconds

2 **Turn [dial] to select the phone number you want to call, and press [call] .**

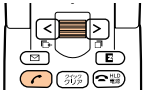

⇒The call is connected to the phone number you selected.

Filtering one-ring calls

What is a one-ring call?

This is a call you receive from an unknown party. They ring only once and leave their phone number in your Received display to make you call back to that number and connect you to a service with very high charges.

One-ring call warning icon

When you have received a one-ring call (call time less than three seconds), the red icon is displayed in the Received display. Be careful when you call back to a number you do not recognize.

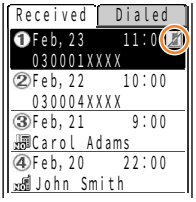

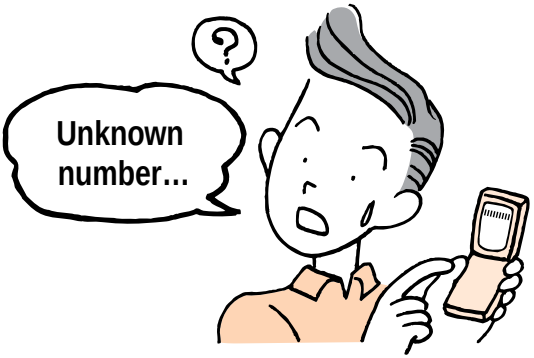

Changing the volume during a call

1 Turn during a call.

: Increases the volume in five levels
: Decreases the volume in five levels

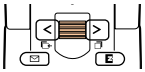

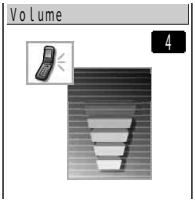

2 Press (ok).

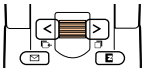

⇒The volume during a call is set.

Changing the volume and tone of the incoming ring

1 **Press (menu) in the idle display.**

⇒The Index menu appears.

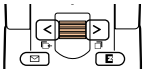

2 **Turn to select (Settings), and press (select).**

⇒The Settings menu appears.

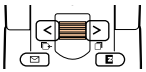

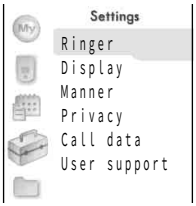

3 **Turn to select "Ringer," and press (select).**

⇒The Ringer display appears.

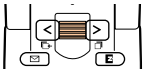

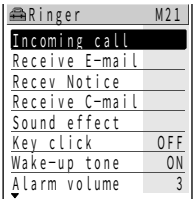

4 **Turn to select "Incoming call," and press (select).**

⇒The Incoming call display appears.

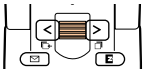

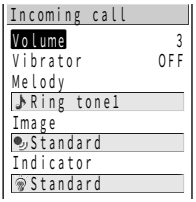

5 **Turn to select "Volume," and press (select).**

⇒The ring volume adjustment display for incoming calls appears, and the incoming ring sounds.

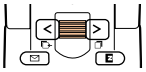

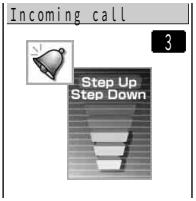

6 Turn to adjust the volume, and press (ok).

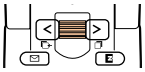

OFF	Does not sound the incoming ring
1 to 5	Sounds at the level you set
Step Down	Gradually decreases the volume of the incoming ring
Step Up	Gradually increases the volume of the incoming ring

"Step Down" and "Step Up" can be selected by turning up beyond "5."

⇒The volume of the incoming ring for incoming calls is set.

To end settings, jump to step 9.

7 Turn to select "Melody," and press (select).

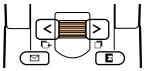

⇒The ring tone selection display for incoming calls appears.

If you press (listen), the incoming ring you selected plays back.
If you press (■) while the incoming ring is being played, the incoming ring stops playing.

8 Turn to select an incoming ring, and press (save).

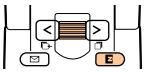

⇒The incoming ring is set.

9 Press (back).

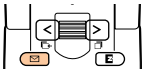

Setting the manner mode

The A1404SII vibrates to notify you of incoming calls.

1 Hold down (▲マナー) for at least one second in the idle display.

⇒The manner mode is set, and , and appear in the display.
At the same time, record message is set, and appears in the display.

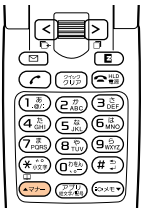

To cancel the manner mode

Hold down (▲マナー) for at least one second in the idle display. , , and disappear from the display.

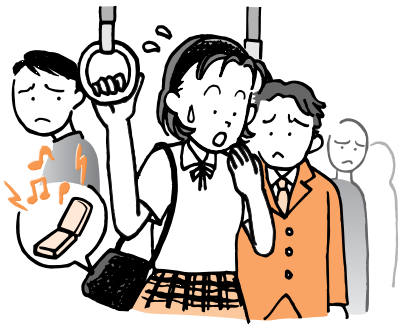

Setting record message

1 Hold down (メモ) for at least one second in the idle display.

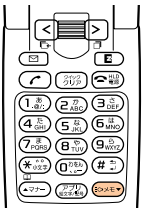

⇒Record message is set, and appears in the display.

You can record a maximum of three messages up to 20 seconds long from other parties.

To cancel record message

Hold down (メモ) for at least one second in the idle display. disappears from the display.

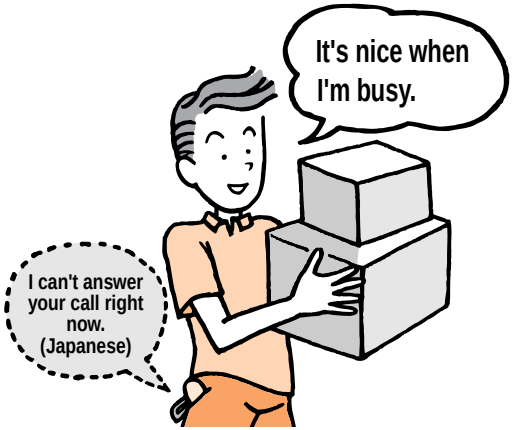

When you turn the power off or you are in a place where the radio waves are weak, use Voice Mail.

Playing back recorded messages

When a message is recorded

⇒A message appears in the idle display, then 1 (number of recorded messages) also appears in the idle display.

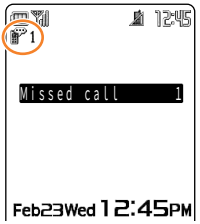

1 Press (メモ) in the idle display.

⇒The Voice memo display appears.

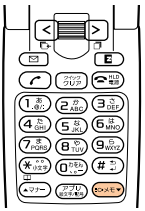

2 Turn to select "Play msg," and press (select).

⇒The Play record msg display appears.

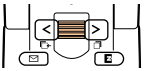

3 Turn to select the recorded message to play back, and press (play).

⇒The recorded message plays back.

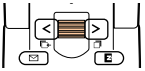

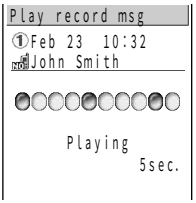

You can delete recorded messages by pressing (delete) while the recorded message is playing back.

Phone book

You can save phone numbers and e-mail addresses of parties that you frequently call or e-mail in the phone book and easily access those numbers and addresses to make calls or create e-mail.

Saving new data

1 **Turn (menu) in the idle display.**

⇒The phone book list appears.

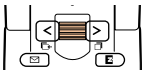

2 **Press (new).**

⇒The edit phone book display appears.

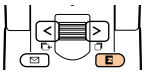

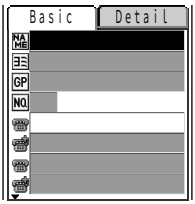

3 **Turn to select NAME (Name), and press (select).**

⇒The Name display appears.

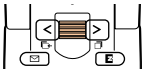

4 **Input the name, and press (ok).**

⇒The edit phone book display reappears.
(JP reading) is automatically inputted.

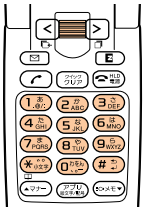

For details on how to input text, see page 79.

5 **Turn to select (Phone no.), and press (select).**

⇒The Phone no. display appears.

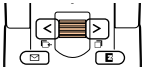

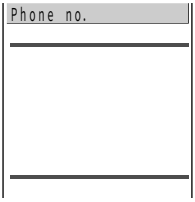

6 Input the phone number, and press (ok).

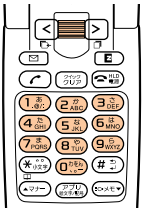

⇒The edit phone book display reappears.
"Public" is automatically inputted at (phone type).

If the phone number to save is a regular phone, start by inputting the area code.

To end saving the phone book, jump to step 9.

7 Turn to select (Mail address), and press (select).

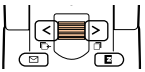

⇒The Mail address display appears.

8 Input the e-mail address, and press (ok).

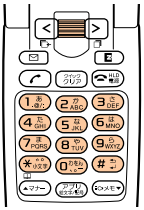

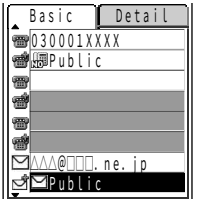

⇒The edit phone book display reappears.
"Public" is automatically inputted at (e-mail address type).

For details on how to input e-mail addresses, see page 80.

You can input the section (domain) (see page 18) following @ in the e-mail address such as "@ezweb.ne.jp" using phrases (see page 82).

9 Press (cmplt).

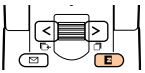

⇒The information is saved in the phone book.

The entry is automatically saved to the smallest available memory number from 000 to 499.

You can also save other items such as groups, incoming rings, postal addresses, and birthdays.

Making a call from the phone book

1 **Turn (menu) in the idle display to display the phone book list.**

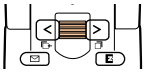

To switch from the " あ " to "A" display line

Press < or >.

The display line can also be switched by pressing 1 あ (あ) ⇔ 2 か (か) ⇔…

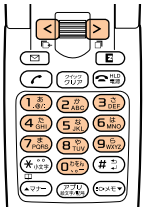

2 **Turn to select the other party to call, and press (select).**

⇒The information saved for the other party you selected appears.

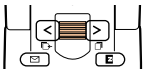

3 **Turn to select the phone number you want to call, and press .**

⇒The call is connected to the phone number you selected.

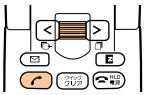

If you select the e-mail address and press (mail), the Create display appears.

For details on how to create e-mail, see page 38.

Editing saved data

Example: To edit phone numbers

1 **Turn (menu) in the idle display to display the phone book list.**

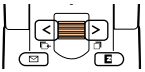

To switch from the " あ " to "A" display line

Press < or >.

The display line can also be switched by pressing 1 あ (あ) ⇔ 2 か (か) ⇔…

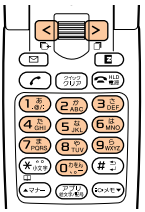

2 **Turn to select the address to edit, and press (select).**

⇒The information saved for the address that you selected appears.

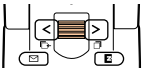

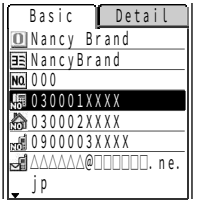

3 **Press (edit).**

⇒The edit phone book display appears.

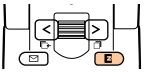

4 Turn to select the item you want to edit (in this case,) and press (select).

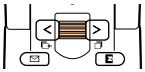

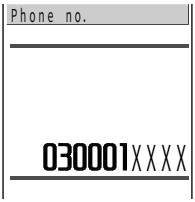

See steps 3 and 4 on page 31 to edit names, and see steps 7 and 8 on page 32 to edit e-mail addresses.

5 Edit the information, and press (ok).

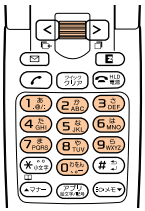

Press (クイック クリア) to delete a saved character.
To delete all characters, hold down (クイック クリア) for at least one second.

6 Press (cmplt).

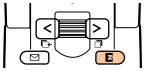

⇒The edited data is saved in the phone book.

Saving a received call

Example: To save from the Received display

1 Press < in the idle display.

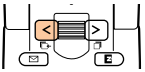

⇒The Received display appears.

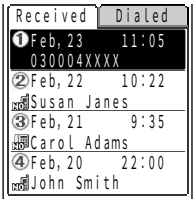

2 Turn to select the phone number to save in the phone book, and press E (save).

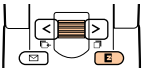

⇒The display for selecting a way to save appears.

New	Creates and saves a new address
Add	Adds and saves newly added information to an address already in the phone book

3 Turn to select "New," and press (select).

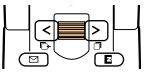

⇒The edit phone book display appears. The phone number you selected is automatically inputted.

For details on how to save information in the phone book, see steps 3 to 9 on pages 31 and 32.

To save information in the phone book from the Dialed display, press > in the idle display to display the Dialed display, and do steps 2 and 3.

Using e-mail

About e-mail

E-mail allows you to exchange mail with PCs or cellphones that support e-mail. You can send mail of 5,000 double byte characters, and photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or an au Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using the e-mail and EZweb services. See page 16 to make initial settings.
- You can send e-mail to up to five recipients at a time.
- You can send up to 1,000 e-mails (including recipients of messages) in one day.

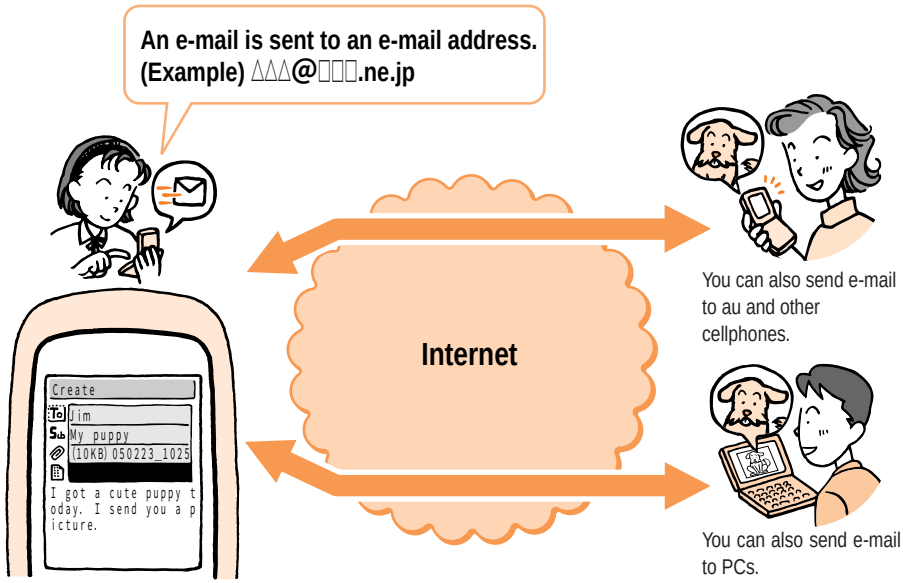

Creating and sending e-mail

1 Press (mail) in the idle display.

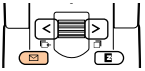

⇒The E-mail menu appears.

2 Turn to select "Create new," and press (select).

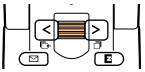

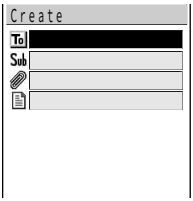

⇒The Create display appears.

Icons

- To (Address): Input the e-mail address of the party you want to send the e-mail to
- Sub (Subject): Input the subject of the e-mail
- (Attachment): Attach data to e-mail
- (Main text): Input the main text of the e-mail

3 Turn to select To (address), and press (select).

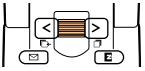

⇒The input method selection display appears.

Phone book	Inputs an e-mail address saved in the phone book
Sent records	Inputs an e-mail address from e-mails that have been sent so far
Manually	Input an e-mail address manually
Profile	Inputs your own e-mail address

There are three types of destinations: To, Cc and Bcc. You can send e-mail to up to five (To, Cc and Bcc) recipients (within 640 single characters).

4 **Turn to select "Phone book," and press (select).**

⇒The phone book list appears.

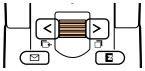

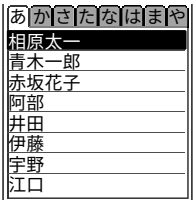

5 **Turn to select the party to send the e-mail, and press (select).**

⇒The information saved for the person that you selected appears.

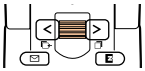

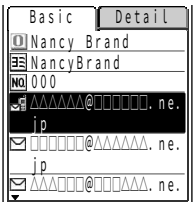

6 **Turn to select the e-mail address, and press (select).**

⇒The Create display appears.

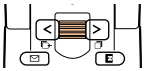

7 **Turn to select Sub (subject), and press (select).**

⇒The Subject display appears.

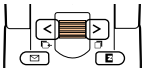

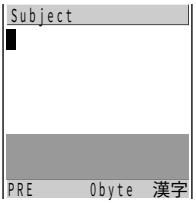

8 **Input the subject, and press (ok).**

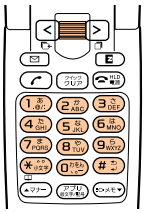

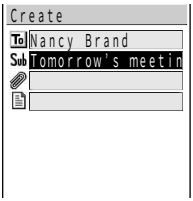

9 Turn to select (main text), and press (select).

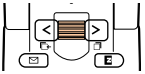

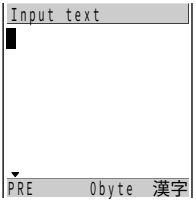

⇒The Input text display appears.

10 Input the main text, and press (ok).

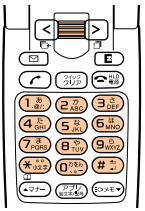

11 Press (send).

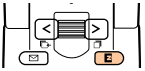

⇒The Select sending display appears.

Send	Sends e-mail to the inputted address
Photo mail	Sends images taken or recorded with the camera after converting them so that they can be viewed on a non-au cellphone or an au cellphone that does not support the movie mail service
My e moji	Sends au e mojis (icons) in a way that they can be viewed on a non-au cellphone as they are
Easy e moji	Sends au e mojis after converting them into non-au e mojis

- After you select "Photo mail," "My e moji" or "Easy e moji," the inputted e-mail address is automatically changed.
- "My e moji" and "Easy e moji" are charged services and require a separate application for EZweb content "絵文字め～る."

12 Turn to select "Send," and press (select).

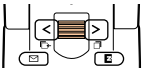

⇒The e-mail is sent.

- When sending finishes, "Send complete" appears and the sent email is saved in the Outbox.

Opening a received e-mail

When you receive an e-mail

⇒A message appears in the idle display, then ✉ also appears in the idle display.

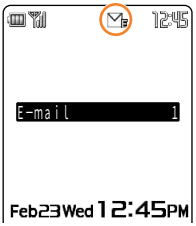

1 **Press (confm).**

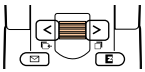

⇒The Inbox display appears.

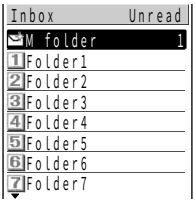

Icon

: Folder containing new mail

2 **Turn to select the folder containing new mail, and press (select).**

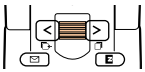

⇒The display for the selected folder appears.

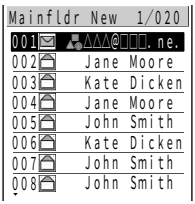

Icons

: "read mail" that has already been read

: "unread mail" that has not yet been read

: Photo attached to the mail

3 Turn to select the new mail, and press (viewer).

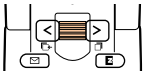

⇒The content of the mail appears.

How to view received mail

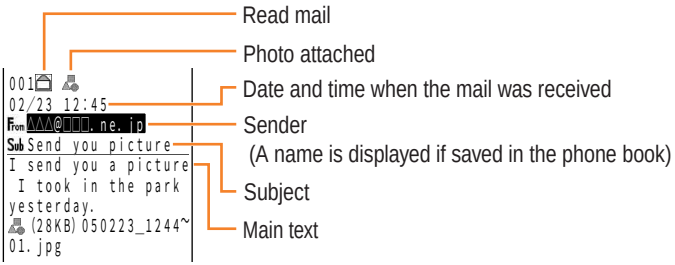

For details on viewing attached images, see page 45.

The font size can be changed by holding down 0わをん for at least one second.

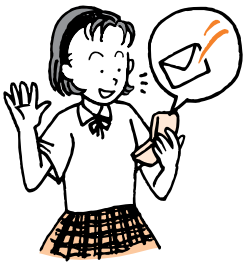

To open an e-mail in the Inbox

1 **Press (mail) in the idle display.**

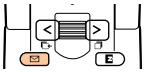

⇒The E-mail menu appears.

Icon

: "unread mail" that has not yet been read
The number on the right is the number of unread mails.

2 **Turn to select "Inbox," and press (select).**

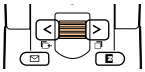

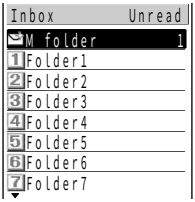

⇒The Inbox display appears.

3 **Turn to select the folder containing the mail you want to read, and press (select).**

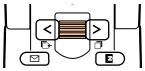

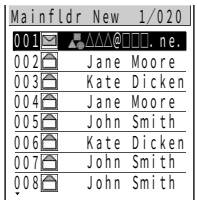

⇒The display for the selected folder appears.

4 **Turn to select the mail you want to read, and press (viewer).**

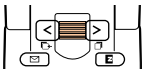

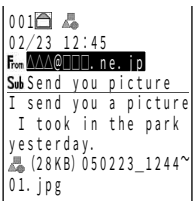

⇒The content of the mail appears.

Replying to a received e-mail

1 **See steps 1 to 4 in "To open an e-mail in the Inbox" (page 43) to view a mail you want to reply to.**

2 **Turn ◁▷ to select From (sender), and press E (reply).**

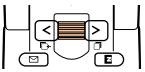

⇒The Create display appears.

Sub(subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

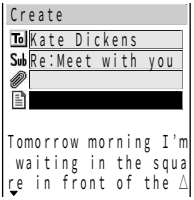

3 **Turn ◁▷ to select (main text), and press E (select).**

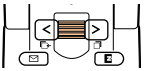

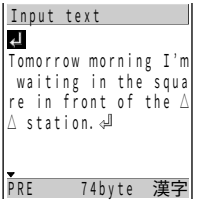

4 **Input the main text, and press E (ok).**

To edit Sub (subject), see steps 7 and 8 on page 39.

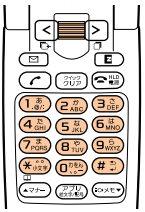

5 **Press E (send).**

For details on how to send mail, see steps 11 and 12 on page 40.

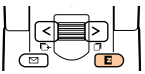

Opening a received e-mail with a photo or movie attached

Example: To view a photo and play back a movie attached to a received e-mail

1 See steps 1 to 3 in "Opening a received e-mail" (pages 41 and 42) to view the content of a mail.

⇒The photo appears.

Turn to select a photo, and press (view) to view the entire photo in the display.

Some photos do not appear automatically depending on their size. If a photo does not appear, go to step 2.

2 Turn to select a file name, and press (recv).

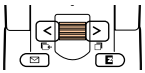

⇒The movie is received. Press (play) to view the movie.

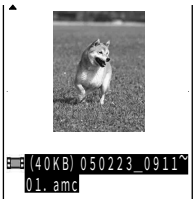

Filtering spam

Setting the mail filter

The mail filter function allows you to block spam or set the A1404SⅡ to receive only specified mail. You can also block mail indicated as "未承諾広告※" that contains lots of spam.

Follow the procedure below to use the mail filter function.

1 Press (mail) in the idle display, and use and to select "Settings" → "Etc. setting."

2 Use and to select "Yes" → "3 メールフィルター," and input your security code.

The mail filter function contains the following functions.

未承諾広告フィルター

This filter allows you to block mail containing "未承諾広告※" in its subject.

アドレスフィルター

"全受信"	All e-mails are received
"指定受信設定"	Only e-mails that arrive from specified e-mail addresses are received "一括指定先" : specifies Internet and cellphone domains "個別指定" : specifies the section preceding @, the domain or the entire e-mail address
"指定拒否設定"	Specifies the section preceding @, the domain or the entire e-mail address, and blocks those specified e-mails
"なりすまし設定"	Filters e-mail from a spammer who pretends to be using a cellphone or a PHS when you set "全受信 "and "規制する" simultaneously

By changing your e-mail address, you can prevent spam from being received. To change your e-mail address, see page 18.

C-mail also provides a function to block spam.

Using C-mail

C-mail allows you to exchange mail with other au cellphones that support C-mail using cellphone numbers. You can send C-mail of 50 double byte characters.

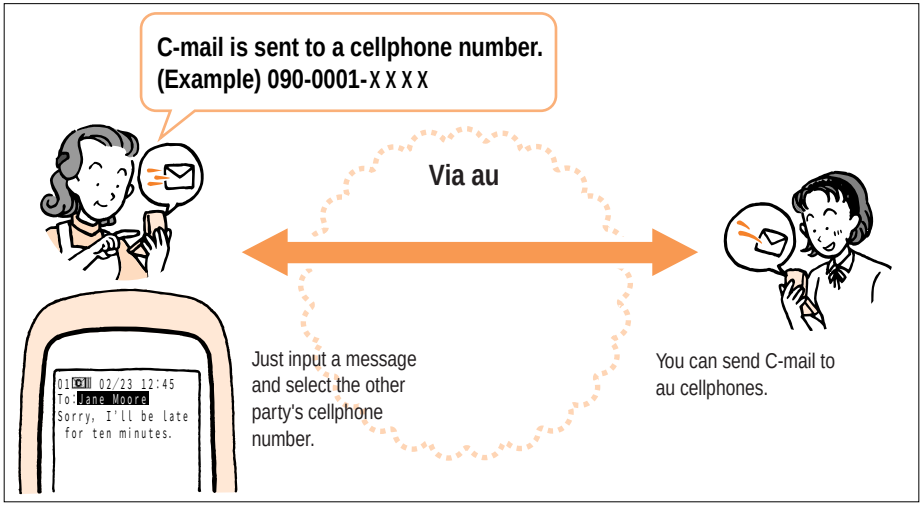
C-mail is sent to a cellphone number.
(Example) 090-0001-XXXX
Via au
02/23 12:45
To:Jane Moore
Sorry, I'll be late
for ten minutes.
Just input a message and select the other party's cellphone number.
You can send C-mail to au cellphones.

You can use C-mail without having to make any special applications in the Metropolitan area or the Chubu District. Users contracted in other areas must apply separately to use the C-mail service.

C-mail safe block function

C-mail safe block function allows you to reject C-mails that include URL (http:// △△△、https// △△△) or phone numbers in the C-mail main text.
C-mail safe block function is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.

Creating and sending C-mail

1 Hold down (mail) for at least one second in the idle display.

⇒The C-mail menu appears.

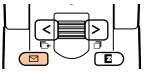

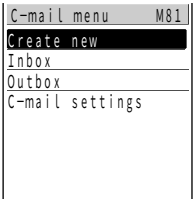

2 Turn to select "Create new," and press (select).

⇒The Input text display appears.

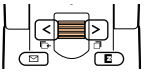

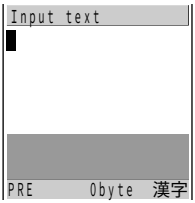

3 Input the main text, and press (ok).

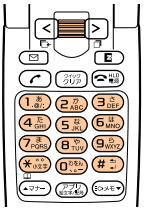

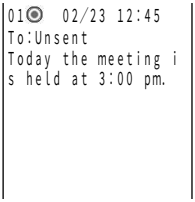

4 Press (send).

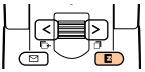

⇒The input method selection display appears.

Phone book	Inputs a cellphone number saved in the phone book
Call list	Inputs a cellphone number from the Dialed or Received display
Manually	Input a cellphone number manually
Memo	Inputs a cellphone number saved in the memo

5 **Turn ◎ to select "Phone book," and press ▭ (select).**

⇒The Phone book list appears.

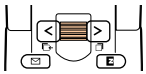

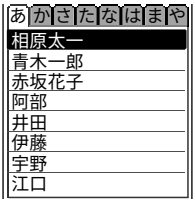

6 **Turn ◎ to select the party you want to send the C-mail, and press ▭ (select).**

⇒The information saved for the person that you selected appears.

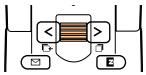

7 **Turn ◎ to select the cellphone number, and press ▭ (select).**

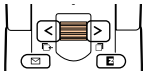

8 **Press ▭ (select).**

⇒The C-mail is sent.

When the mail arrives at the other party, "Sending completed" is displayed, and the sent mail is saved in the Outbox.

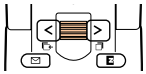

Opening a received C-mail

When you receive a C-mail

⇒A message appears in the idle display, then also appears in the idle display.

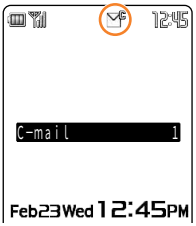

1 **Press (confm).**

⇒The content of the mail appears.

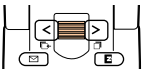

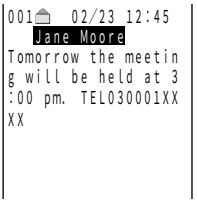

To open a C-mail in the Inbox

1 **Hold down (mail) for at least one second in the idle display.**

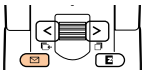

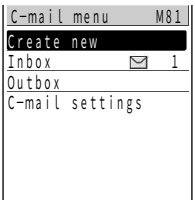

⇒The C-mail menu appears.

Icon

: "unread mail" that has not yet been read
The number on the right is the number of unread mails.

2 **Turn to select "Inbox," and press (select).**

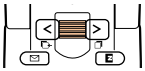

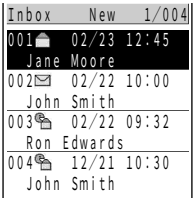

⇒The Inbox display appears.

3 **Turn to select the mail you want to read, and press (viewer).**

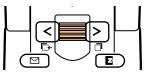

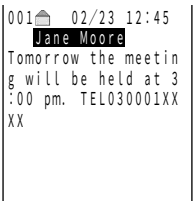

⇒The content of the mail appears.

Camera

A1404SⅡ is equipped with 320,000 pixels (effective) highly sensitive CMOS image sensor camera and allows you to take photos and record movies.
You can use the infrared data exchange feature to send and receive data with other au cellphones that are equipped with the infrared data exchange feature.

What you can do with this camera

1 You can have fun with photos and movies on the A1404SⅡ.

You can set photos you have taken as the idle display, or save photos or movies to the phone book or display them when you have an incoming call.

2 You can mail photos and movies.

You can send photos and movies attached to e-mail.
※The VGA format is ideal for using photos on personal computers.

Read from page 60

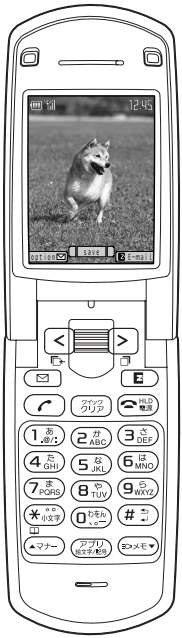

3 You can use the infrared data exchange feature.

You can send and receive data, by using the infrared data exchange feature, with other au cellphones that are equipped with the infrared data exchange feature.

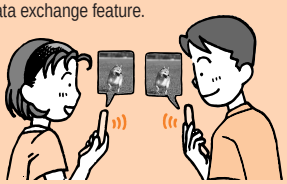

Read from page 75

How to hold the camera

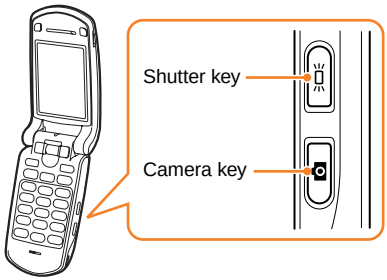

Taking photos and movies with your cellphone folded out

To take "QVGA" or "QQVGA" photos

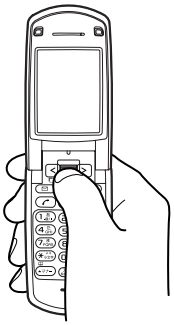

To take movies or "VGA" photos

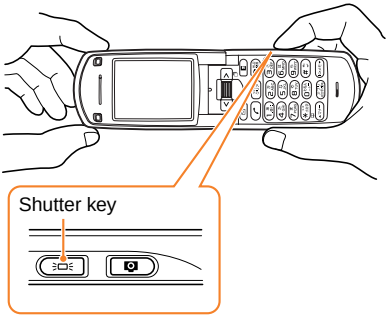

Be sure not to cover the lens by your left hand.

Taking photos and movies with your cellphone closed (for self-portraits)

To take "QVGA" or "QQVGA" photos

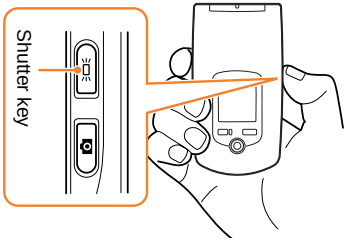

To take movies or "VGA" photos

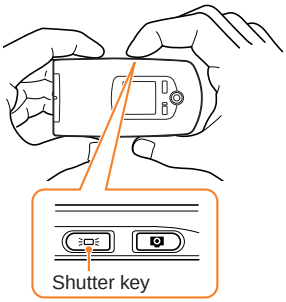

Taking photos

1 **Hold down (camera key) on the side of your cellphone for at least one second in the idle display.**

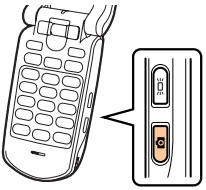

⇒The photo monitor screen appears.

You can also display the photo monitor screen by pressing (menu) in the idle display, and using and to select "MySelection" → "Camera."

2 **Display the subject you want to take on the photo monitor screen.**

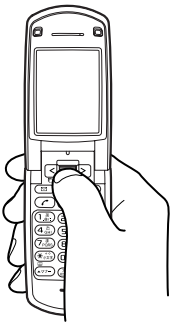

3 **Press (shoot).**

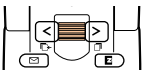

⇒You hear the shutter sound, and the photo you have taken is displayed (preview screen).

You can also take photos by pressing (shutter key) on the side of your cellphone.

4 Press (save).

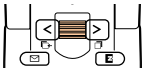

⇒"Saved in data folder" is displayed, and the display returns to the monitor screen.

- You can also save the photo by pressing (shutter key) on the side of your cellphone.
- Photos are saved in "Photo folder" in the data folder. Each photo is titled as follows:

Example of a photo title

050223_1030~02

- 050223: Date: February 23, 2005
- 1030: Time: 10:30
- ~02: Serial number: 2nd photo

- There are three photo shoot modes: "QVGA," "QQVGA," and "VGA."

Recording movies

1 **Hold down (camera key) on the side of your cellphone for at least one second in the idle display to display the photo monitor screen.**
Then press (camera key) again.

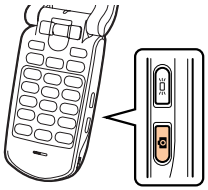

⇒The movie monitor screen appears.

2 **Hold the A1404SII with both hands, and display the subject you want to take on the movie monitor screen.**

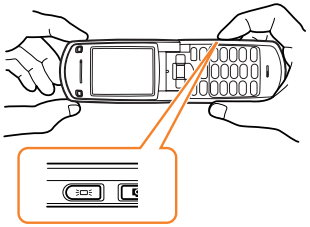

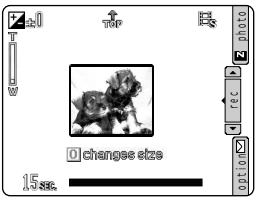

3 **Press (shutter key) on the side of your cellphone.**

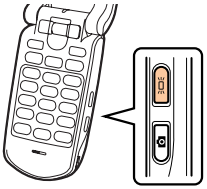

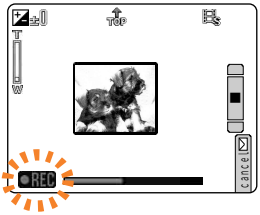

⇒You hear the shutter sound, and REC flashes when recording starts.

You can also record images by pressing (rec).

To cancel recording

Press (cancel). Recording is canceled, and the monitor screen reappears.

To stop recording

Press (shutter key) or (■).

When you stop recording or the recording time ends

The end tone sounds, and the recorded movie plays back automatically (automatic playback screen).

During automatic playback, you can adjust the volume of the recorded movie by turning .

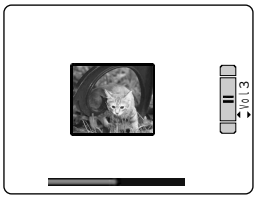

(automatic playback screen)

When automatic playback ends, the initial recorded screen is displayed vertically (preview screen).

The default recording time is 15 seconds. The recording time setting can be changed to up to 60 seconds.

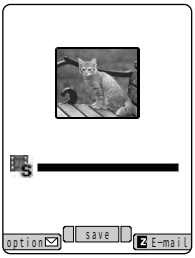

(preview screen)

4 Press (save).

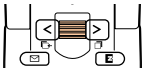

⇒"Saved in data folder" is displayed, and the display returns to the movie monitor screen.

You can also save the movie by pressing (shutter key) on the side of your cellphone.

Movies are saved in "Movie folder" in the data folder. Each movie is titled as follows:

Example of a movie title

S_050223_1030~02

- S: Recorded in the Standard S mode
- 050223: Date: February 23, 2005
- 1030: Time: 10:30
- 02: Serial number: 2nd movie

There are four movie record modes: "Standard S," "Standard M," "S long," and "M long."

Viewing photos you have taken

1 **Hold down (camera key) on the side of your cellphone for at least one second in the idle display.**

⇒The photo monitor screen appears.

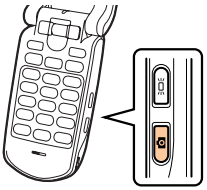

2 **Press (option), turn to select "Photo folder," and press (select).**

⇒The Photo folder display appears.

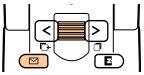

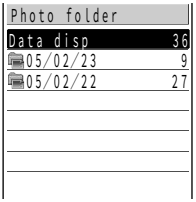

3 **Turn to select the date folder containing the photo you want to view, and press (select).**

⇒Three photos in "Photo folder" in the date folder appear starting with the photo taken most recently.

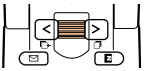

4 **Turn to select the photo you want to view, and press (view).**

⇒The photo you selected appears.

You can change the size of the display by pressing (わをん).

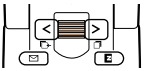

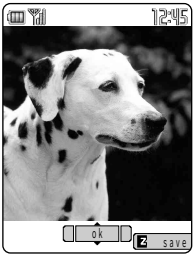

Viewing movies you have recorded

1 **See step 1 in "Recording movies" (page 56) to view the movie monitor screen.**

2 **Press (option), turn to select "Movie folder," and press (select).**

⇒The Movie folder display appears.

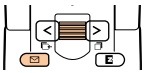

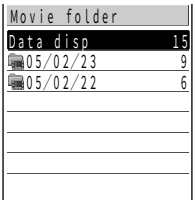

3 **Turn to select the date folder containing the movie you want to view, and press (select).**

⇒Three movies in "Movie folder" in the date folder appear starting with the movie recorded most recently.

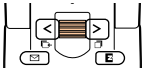

4 **Turn to select the movie you want to view, and press (play).**

⇒The movie you selected plays back.

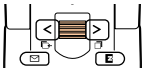

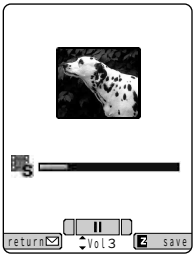

Attaching a photo or movie to e-mail

1 Press E (E-mail) in the preview screen immediately after you have taken the image.

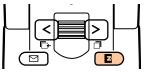

⇒"Saved in data folder" is displayed, and the Create display appears.

- The photo or movie you have taken is automatically attached to an e-mail (attachment). For details on how to create e-mail, see steps 3 to 12 on pages 38 to 40.
- "Other phone cannot play size over case happen" may appear. Turn to select "Attach on," and press (select).
- Photos and movies already saved in the data folder can also be attached to e-mail.

Photo mail

You can automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using an au cellphone.
To use Photo mail, you must change the other party's e-mail address to a Photo mail address.
If you select "Photo mail" for the Address change function when sending e-mail, the other party's e-mail address is automatically changed as shown below before sending.

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□※.vodafone.ne.jp	△△△@□※.vodafone.nepm.jp
TU-KA and au phones that do not support Movie mail	△△△@ezweb.ne .jp	△△△@ezweb.nepm.jp

※: □ varies according to the area.

EZweb

You need to subscribe to the EZweb service to use the EZweb service.
Contact an au shop or an au Customer Service Center if you did not subscribe to the service at the time of purchase.
Do initial settings before using the e-mail and EZweb services.
If you have not done initial settings yet, see page 16.
EZweb is an information service that allows you to enjoy the Internet on your cellphone.
With EZweb, you can obtain Chaku-Uta™, the latest news, and other contents from information sites.

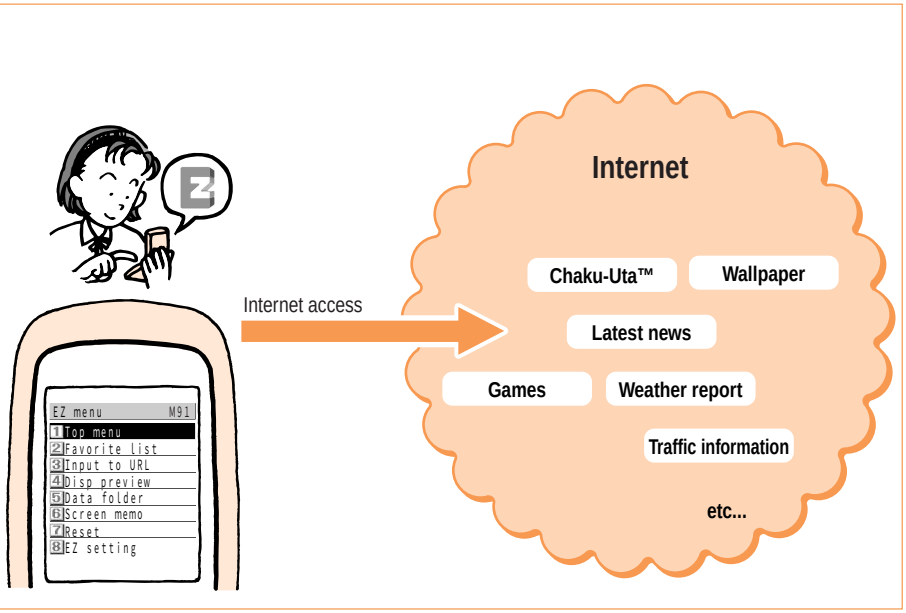

Viewing information sites

You can access handy, fun sites from the EZ Top menu.

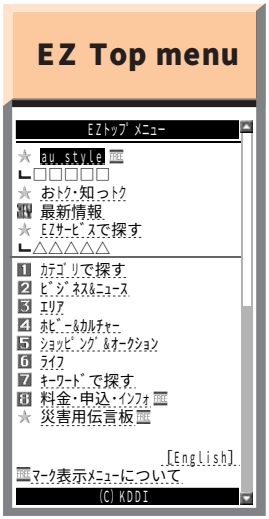

au style
Introduce the au recommended information and sites

おトク・知っトク
Provide presents or useful information free of charge to EZweb service subscribers

最新情報
Check feature information that can be seen easily and daily information such as weather or fortune-telling, etc.

EZ サービスで探す
Introduce handy and fun EZweb services

カテゴリで探す
Search for sites by category

ビジネス＆ニュース
Provide the latest information such as news, whether and stock prices or information useful for business

エリア
Provide regional information such as weather and maps

ホビー＆カルチャー
Provide the latest information such as games, fortune-telling and music or trend information such as hobby and entertainment

ショッピング＆オークション
Provide information about shopping malls where you can purchase goods with your cellphone, and about the auction where you can put up or go for easily

ライフ
Provide information useful for your life

キーワードで探す
Search for sites with a keyword

料金・申込・インフォ
Post cost conformation, various applications, au online manual and notice from au

災害用伝言板
Register/check the safety information in the event of a disaster

English
Introduce English version of sites

- The display layout and content are just an example. These are subject to change.
- Some information sites are subject to additional information costs besides communication costs.

To display the EZ Top menu

1 **Press (EZ) in the idle display.**

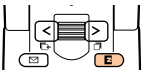

⇒The EZ menu appears.

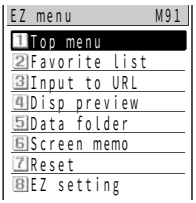

2 **Turn to select "1 Top menu," and press (select).**

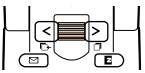

⇒The EZ トップメニュー display appears.

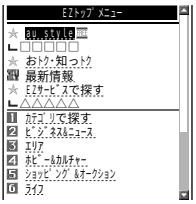

It may take a short while for the display to appear.

To access information sites

Turn to select the desired information site, and press (Select).

クイック クリア	Pressing this button returns the display to the previous display. Holding it down for at least one second returns the display to the EZ Top menu
HLD 電源	Exits EZweb
	Scrolls the display up and down
<	Returns to the previous display
>	Goes to the next display (available only when a display was previously viewed)

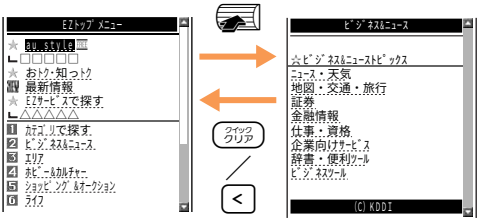

(sample display)

EZweb

Saving your favorite sites

1 **Display the site you want to save, and press E (Browser Menu).**

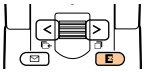

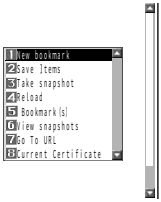

⇒The Browser Menu appears.

2 **Turn to select "1 New bookmark," and press (Select).**

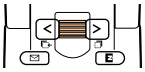

⇒The display for saving the title and URL appears.

3 **Turn down, press (Save), then press (OK).**

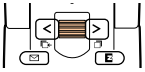

⇒The currently displayed site is saved to the Favorite list.

You can save up to 100 sites to the Favorite list. Note, however, that some sites cannot be saved.

Viewing a site saved to the Favorite list

1 **Press (EZ) in the idle display.**

⇒The EZ menu appears.

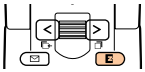

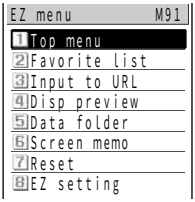

2 **Turn to select "2 Favorite list," and press (select).**

⇒The Favorite list appears.

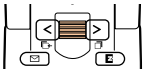

3 **Turn to select the site you want to view, and press (Go).**

⇒The site you want to view appears.

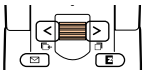

Confirming your call costs

You can confirm call costs, communications costs and other information.

1 **Press (menu) in the idle display.**

⇒The Index menu appears.

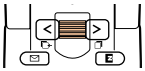

2 **Turn to select (MySelection), and press (select).**

⇒The MySelection menu display appears.

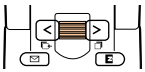

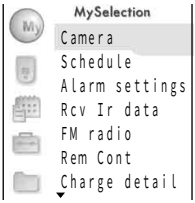

3 **Turn to select "Charge detail," and press (select).**

⇒The Connect confirmation screen appears.

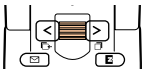

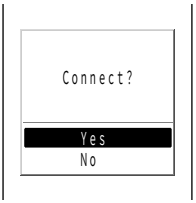

4 **Turn to select "Yes," and press (select).**

⇒The 料金照会 display appears so that you can select the item you want to confirm.

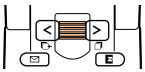

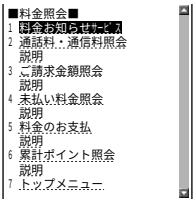

EZweb

Downloading a Chaku-Uta™

Example: To download a Chaku-Uta™ and specify it as an incoming call melody.

1 **Press (EZ) in the idle display.**

⇒The EZ menu appears.

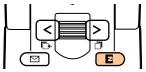

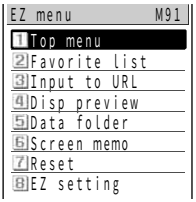

2 **Turn to select "1 Top menu," and press (select).**

⇒The EZ トップメニュー display appears.

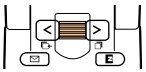

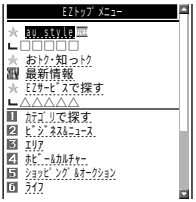

3 **Turn to select "1 カテゴリで探す ," and press (Select).**

⇒The カテゴリで探す display appears.

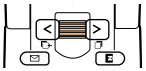

4 **Turn to select " 着うた・着ムービー ," and press (Select).**

⇒The 着うた・着ムービー display appears.

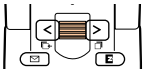

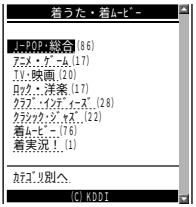

(sample display)

5 Turn to select the desired site, and press (Select).

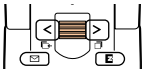

⇒Follow the on-screen instructions to select the melody you want to download.

When the additional information cost is charged to use the site, you must input your EZ password or Premium EZ password.

EZ password:

4-digit number to be set when you subscribe to the paid contents for the first time.

Premium EZ password:

4~8 -digit number to be set when you apply to " 初回まとめて au 支払い ".

Follow the on-screen instructions to input either password.

Perform the setting when using the password for the first time.

6 Select a melody to download.

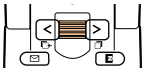

⇒Download the melody by following the on-screen instructions.

7 When downloading finishes, press (play) to play back the Chaku-Uta™, and press (save) while the Chaku-Uta™ is playing.

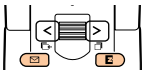

⇒The Save to display appears.

8 Turn to select "Phone ring tone," and press (select).

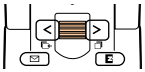

⇒The downloaded Chaku-Uta™ is specified as an incoming ring.

FM radio

EZweb subscription required

The A1404SⅡ allows you to listen to the FM radio.
You can check song names or search for your favorite songs of Chaku-Uta™ and download them while receiving the FM radio.

How to listen to the FM radio

There are two ways to listen to the FM radio:

1 **You can listen to the FM radio by connecting a flat-type earphone microphone to the A1404SⅡ.**

2 **You can listen to the FM radio by connecting the Sony Ericsson AC adaptor 02 to the desktop holder and inserting the A1404SⅡ into the desktop holder.**

If you want to listen from the speaker, set "スピーカー切り替え" (Switching speaker) to "スピーカー" (Speaker). For details on the setting, see page 73.

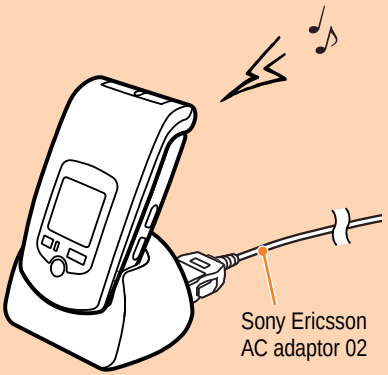

The FM radio sounds from an earphone by default.

To connect a flat-type earphone microphone

① Open the cover of the flat-type earphone microphone jack.
② Insert the flat-type earphone microphone into the flat-type earphone microphone jack.

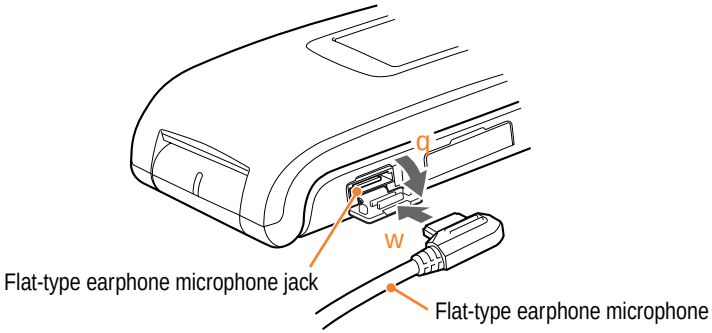

Connecting it by force may cause a breakage.

To listen to the FM radio clearly

The flat-type earphone microphone code and Sony Ericsson AC adaptor code work as an antenna. Extend the code as long as possible and search for a direction that enables the FM radio to sound better.
We also recommend that you listen to the FM radio near a window if you are in the room where radio waves are hard to reach.

Listening to the FM radio

1 **Press (menu) in the idle display.**

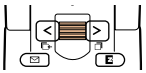

⇒The Index menu appears.

You can also receive the FM radio by pressing (アプリ 絵文字/記号), turning to select "EZ · FM," and pressing (起動).

2 **Turn to select (MySelection), and press (select).**

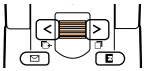

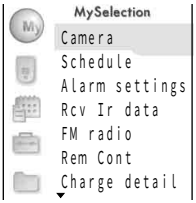

⇒The MySelection display appears.

3 **Turn to select "FM radio," and press (select).**

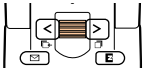

⇒The FM radio is received and appears.

How to view the FM radio display

Radio frequency

NOW ON AIR information

If you use the FM radio for the first time after the purchase, the display to select an area appears. Select an area where you use the FM radio. Receivable radio stations are automatically set up.

You can change the selected item by pressing (クイック クリア) in the FM radio display and turning . Pressing allows you to operate the selected item.

If there is an incoming call while the flat-type earphone microphone is connected to the A1404SⅡ, pressing (call) starts a call with the A1404SⅡ and pressing the switch of the earphone microphone starts a call with the earphone microphone.

The specification is subject to change without notice. The display is an example.

To adjust volume

Press [<]/[>] in the FM radio display.
The volume can be set to 10 levels and silent.

[<]: Decreases volume
[>]: Increases volume

Holding down [<] for at least one second mutes the sound.

To select a radio station

Select NOW ON AIR information in the FM radio display, and turn .

The following is a way to tune the radio frequency per 0.1 MHz:

① Press [クイック クリア] in the FM radio display.
② Turn to select Radio frequency and press .
③ Turn (TUNING).
You can tune automatically by holding down [✉] or [E] for at least one second.

To display NOW ON AIR information

If you select NOW ON AIR information in the FM radio display, and press , the information such as artist and song names on the radio is displayed.

Information may not be provided depending on the programs.

Using FM radio does not charge the packet transmission fee.
Packet transmission fee is charged if services such as NOW ON AIR are used.

To switch the sound output (Earphone/Speaker)

If you press [✉] (TOOL) in the FM radio display, and select "[7] スピーカー切り替え" (Switching speaker), you can set the sound output to "イヤホン" (Earphone) or "スピーカー" (Speaker).
The default setting is "イヤホン" (Earphone).

Suspending/ending the FM radio

You can suspend or end the FM radio. If you suspend the FM radio, you cannot operate it, but you can perform other operations while listening to the FM radio.

1 Press HLD 電源 in the FM radio display.

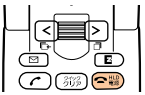

⇒The confirmation display appears.

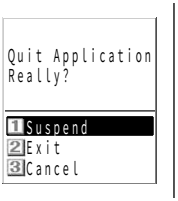

1 Suspend	Closes the FM radio display and continues the FM radio
2 Exit	Stops the FM radio and exits the FM radio display
3 Cancel	Continues the FM radio

2 Turn to select "1 Suspend" or "2 Exit" and press (select).

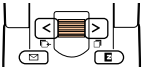

- If you press HLD 電源 in the idle display while the FM radio is suspended, the FM radio quit confirmation display appears. You can end the FM radio by turning to select "Quit " and pressing (select).
- If you press アプリ 絵文字/記号 in the idle display while the FM radio is suspended, the FM radio display reappears.
- If nothing has been operated for two hours by default, the FM radio exits automatically.

Infrared data exchange feature

You can use the infrared data exchange feature of your A1404SII to send and receive phone book entries, profile data, data in data folders, and other data to and from other au cellphones that are equipped with the infrared data exchange feature.

Using the infrared data exchange feature

To send data with the infrared data exchange feature, both the person sending and the person receiving the data need to make preparations.
(We recommend that the person receiving data get ready before the sender sends the data.)

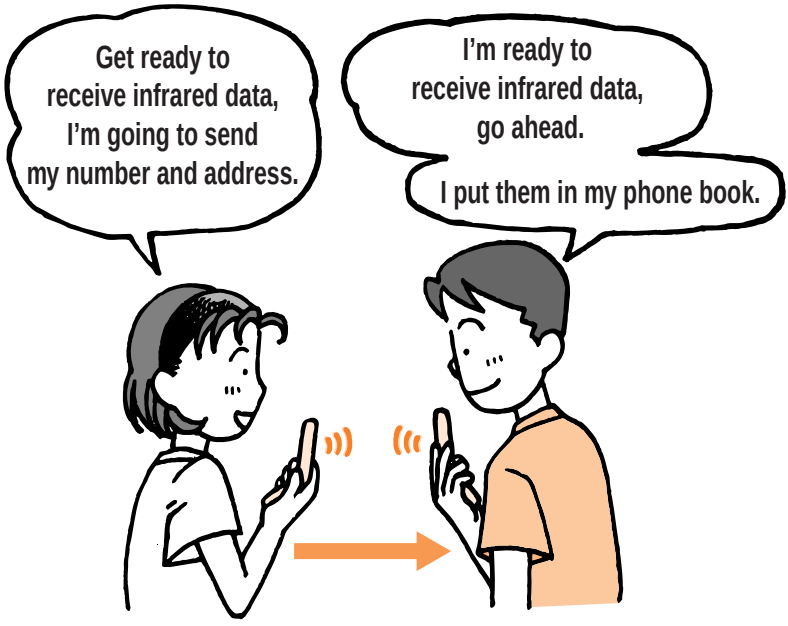
Get ready to receive infrared data, I'm going to send my number and address.
I'm ready to receive infrared data, go ahead.
I put them in my phone book.
Sender
Receiver

※ For details on the sending procedure, see page 77.

※ For details on the receiving procedure, see page 78.

Procedure

Use your A1404SⅡ within 20 cm of another au cellphone. Also, keep your A1404SⅡ pointed at the infrared port of the other au cellphone and do not move your A1404SⅡ until data has finished being sent or received.

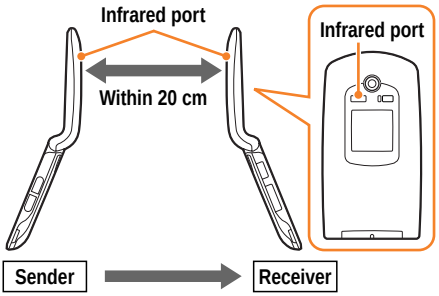

Data that can be sent and received

- Phone book entries
- Profiles
- Schedules
- Task lists
- Data in data folders (photos, movies and other data)

In some cases, you may not send or receive data because of copyright protection.

You cannot send or receive some data from some au cellphones even if the other au cellphone you are communicating with is equipped with the infrared data exchange feature.

The infrared data exchange feature of the A1404SⅡ sometimes does not transmit properly if the A1404SⅡ is used in direct sunlight, under fluorescent lighting or near other equipment that emits infrared rays.

Using the infrared data exchange feature to send data

You can send phone book entries, profile data, data in data folders, and other data to other au cellphones that are equipped with the infrared data exchange feature.

Example: To send profile data

1 **Press (menu) in the idle display, and press わをん.**

⇒The profile display appears.

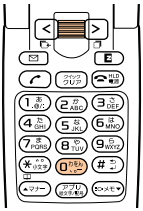

2 **Press (option).**

⇒The option list appears.

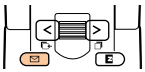

3 **Turn to select "send Ir data," and press (select).**

⇒Data is sent through the infrared data exchange feature.

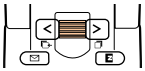

When sending finishes, the display on the right appears.

You may be required to input your authentication password. The authentication password is the four-digit arbitrary numbers decided with the communication partner.

Using the infrared data exchange feature to receive data

Before receiving data, make the following preparations.

1 **Press (menu) in the idle display.**

⇒The Index menu appears.

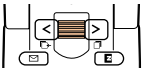

2 **Turn to select (MySelection), and press (select).**

⇒The MySelection menu appears.

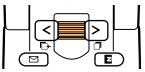

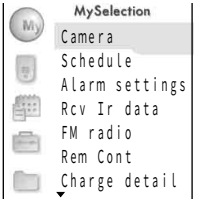

3 **Turn to select "Rcv Ir data," and press (select).**

⇒Data is received through the infrared data exchange feature.

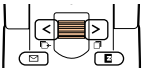

When receiving finishes, a message is displayed and the data is saved.

You may be required to input your authentication password. The authentication password is the four-digit arbitrary numbers decided with the communication partner.

Text input

Changing the character mode

Input text using characters from the following character mode.

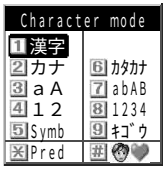

1 Kanji/Hiragana mode
2 Double byte katakana mode
3 Double byte alphanumeric mode
4 Double byte number mode
5 Double byte symbol mode
※ Phrase mode
6 Single byte katakana mode
7 Single byte alphanumeric mode
8 Single byte number mode
9 Single byte symbol mode
E moji mode

1 Press E (mode) in the text input display.

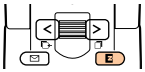

⇒The Character mode display appears.

2 Turn ◁▷ to select the character mode, and press ● (select).

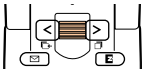

⇒You can now input text in the selected character mode.

The character mode can also be changed by pressing E (next), 1 to 9, ✱, or # in the Character mode display.

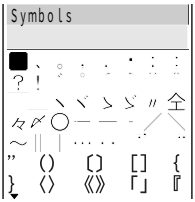

Text input

To input alphanumerics

Select alphanumerics by changing the character mode to 3 aA or 7 abAB (see page 79).

In the text input display, you can input text by pressing the keys indicated in the following table.

Example: 2 か ABC → 2 か ABC → 2 か ABC → 2 か ABC → 2 か ABC → 2 か ABC → 2 か ABC

a → b → c → A → B → C → 2 → a

■ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
1 あ .@/:	.	@	/	:	-	_	~	1					
2 か ABC	a	b	c	A	B	C	2						
3 さ DEF	d	e	f	D	E	F	3						
4 た GHI	g	h	i	G	H	I	4						
5 な JKL	j	k	l	J	K	L	5						
6 は MNO	m	n	o	M	N	O	6						
7 ま PQRS	p	q	r	s	P	Q	R	S	7				
8 や TUV	t	u	v	T	U	V	8						
9 ら WXYZ	w	x	y	z	W	X	Y	Z	9				
0 わん ・ー	Space	!	?	-	,	'	;	(	)	"	&	\	0
* ゛゜ 小文字 ※	!	?	-	,	'	;	(	)	"	&	\		

※ * ゛゜ 小文字 is also used to switch between uppercase and lowercase.

You can input your e-mail address using up to 20 single byte alphanumerics in lowercase including "-" (hyphen) and "." (period). Note, however, that "." cannot be used in a row, or at the beginning or end of your e-mail address. Also, your e-mail address cannot be prefixed by "0." Characters and symbols shaded in the table are not allowed before @ of "△△△ @ezweb.ne.jp."

Example: To input "tomy1" in the mail address

1 Input the section preceding @.

t : Press 8 TUV once.
o : Press 6 MNO three times and > once.
m: Press 6 MNO once.
y : Press 9 WXYZ three times.
1 : Press 1 .@/: eight times.

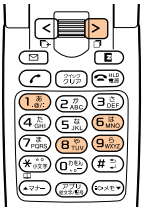

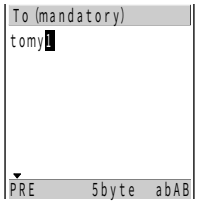

For details on how to input "@ezweb.ne.jp" see page 82.

To consecutively input characters assigned to the same key

Input the first character, press > and press the next character key.

Example: To input "ab"

Press 2 ABC once. → Press >. → Press 2 ABC twice.

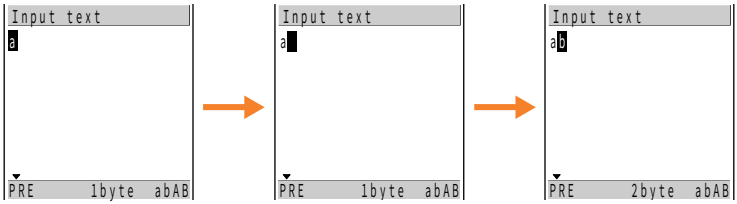

To input uppercase characters

Example: 2 ABC → * 小文字 → * 小文字

a → A → a

To delete characters

Example: Press クイック クリア once.

abcde → abcd

Hold down クイック クリア for at least one second.

abcde → (All characters are deleted.)

To input icons

Change the character mode to the E moji mode (#) (see page 79).

1 **Use and < / > to select the icon you want to use, and press (select).**

⇒The icon you selected appears.

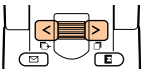

To input phrases

Change the character mode to the Phrase mode (*Pred) (see page 79).

Example: To input "@ezweb.ne.jp"

1 **Turn to select "1 Internet," and press (select).**

⇒The phrases selection display appears.

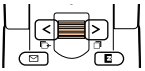

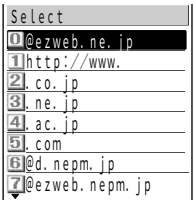

2 **Turn to select "0 @ezweb.ne.jp" and press (select).**

⇒The selected phrase is inputted.



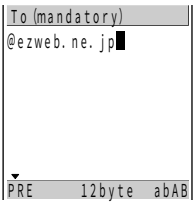

Troubleshooting

Symptom	Check	Remedies	Page
Power does not turn on.	Is the battery pack properly attached?	Properly attach the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	10
	Did you hold down HLD 電源 for at least one second?	Hold down HLD 電源 for at least one second.	11
Cannot make calls.	Is "圏外" displayed on the display?	Make a call from a place where "圏外" is not displayed.	11
	Did you input the area code before inputting the phone number?	When making a call to a phone other than a cellphone, first input the area code even if you are inside the same city.	21
	Is the power on?	Hold down HLD 電源 for at least one second.	11
	Did you press ?	Press .	21
Cannot receive calls.	Is "圏外" displayed on the display?	Move to a place where "圏外" is not displayed.	11
	Is the power on?	Hold down HLD 電源 for at least one second.	11
No reaction when a key is pressed.	Is the power on?	Hold down HLD 電源 for at least one second.	11
	Is the keypad locked?	Hold down for at least one second to unlock the keypad.	—
Warning tone sounds, and power turns off.	There is not enough power left in the battery pack.	Charge the battery pack.	10
Incoming calls are automatically answered.	Is record message set?	Hold down ﾒｰﾙ/ﾒﾓ for at least one second to cancel record message.	29
You cannot hear the other party.	Is the volume during a call set low?	Turn up while you are talking. The volume during a call increases.	25
You have incoming spam.	Is the mail filter function in use?	Use the mail filter function .	46
You are connected to a charged service when you call back to a received call.	Have you called an unfamiliar phone number?	Be careful when you call back to a number you do not recognize.	24

Disaster Message Board Service

About Disaster Message Board

When a large scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be viewed from anywhere in Japan through EZweb or Internet.

Registering safety information

- ◆ When a large scale disaster occurs, you can register from au phone your safety information such as your condition or comments to the "Disaster Message Board" created on the EZweb.
- ◆ After the registration of your safety information, you can notify by e-mail designated family or acquaintances that you registered your safety information on the "Disaster Message Board".

Viewing the safety information

- ◆ You can view the safety information of the person you want to know of by entering the phone number from EZweb or internet. ※
- ※ You can view the safety information from other carriers' cellphone (except for TU-KA), PHS or PC by accessing http://dengon.ezweb.ne.jp/.

Access method	(EZ) → "Top menu" → "災害用伝言板"
	http://dengon.ezweb.ne.jp/

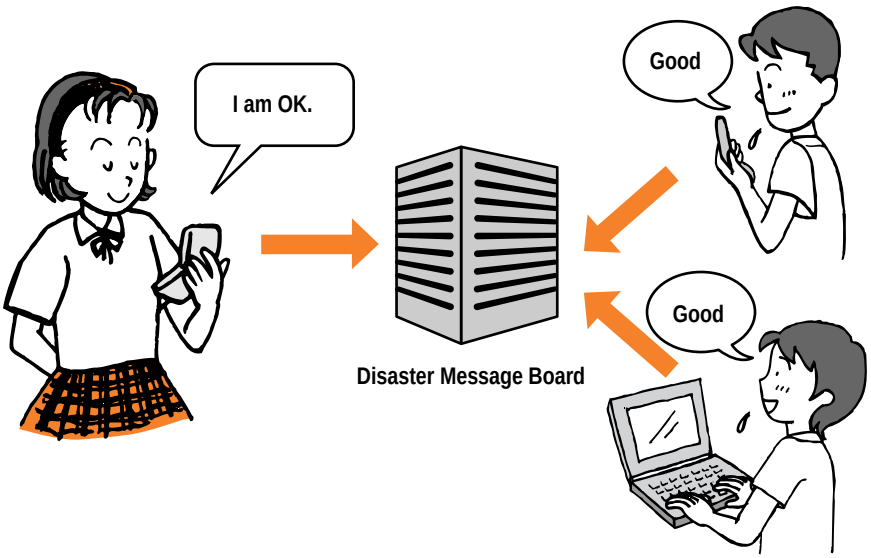

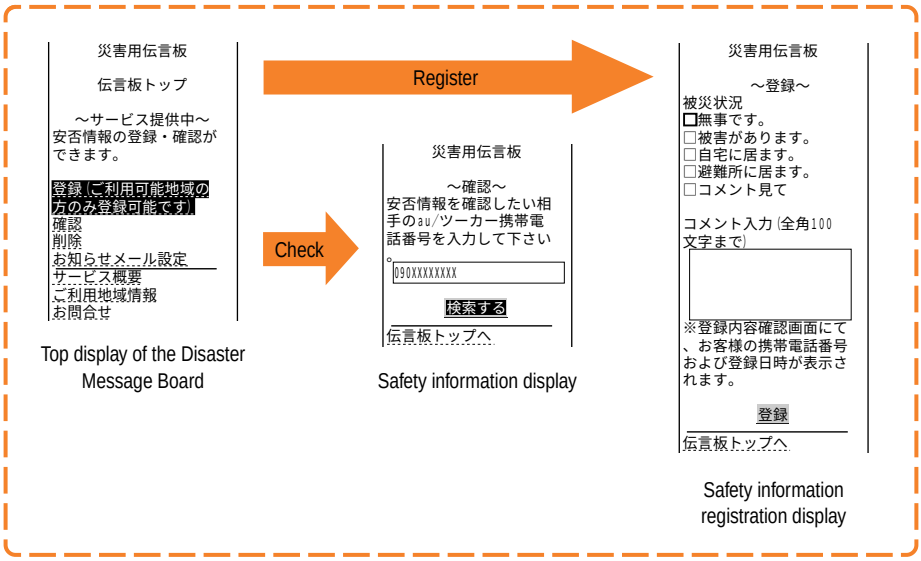

- The registered information is saved for up to 72 hours.
- Up to 10 entries can be registered per 1 phone number. When the number of entries exceeds 10, the entry will be overwritten from the oldest information.
- The demonstration of this service can be viewed from [2] (EZ) → "Top menu" → "料金・申込・インフォ" → "災害用伝言板（デモ版）".

Other features

The A1404SⅡ has other handy features in addition to those introduced in this Basic Manual.

Luminous convert

You can make dark portion on photos clear and easy to view.

EZ Chaku-Uta™

This service allows you to set an artist's song as an incoming ring.

Menu design settings

You can select a pattern for the menu display. You can also set the pattern data you downloaded.

Idle display settings

You can set a photo taken by the A1404SⅡ or other image as the idle display. You can also select your favorite image for the idle display of the quick display.

Incoming indicator settings

You can make and set the color and flashing pattern of an incoming indicator when you have an incoming call or mail.

PhotoMixer

You can create your own original works by adding images or text to melody-attached animation templates.

EZ apps (BREW®)

You can download game software from EZweb sites and play games. Barcode Reader and アプリモコンEZ (Remote Control) for example, are also available.

Index

A

accessories **8**

B

battery pack **8, 9, 10**
battery power, remaining **3, 11**
before use **8**

C

call **21**
if you could not answer 22
making 21
notify/not notify the other party 21
receiving 22
camera **52**
how to hold 53
movie 56
photo 54
cellphone etiquette **1**
center jog **9, 12**
charge indicator **9, 10**
charging the battery pack **10**
C-mail **47**
creating and sending 48
icon 51
opening 50
receiving 50
confirming your call costs **67**
confirming your cellphone number **17**

D

desktop holder **8, 10**
Dialed display **23**
domain **18**
downloading Chaku-Uta™ **68**
drive mode **4**

E

e-mail **37**
attaching photo or movie 60
creating and sending 38
icons 38, 41, 43
initial settings 16
opening 41
receiving 41
replying 44
viewing attached photo or movie 45
e-mail address
changing 18
confirming 17
EZ Top menu **63, 64**
EZweb **62**
confirming your call costs 67
Favorite list 66
information sites 63
initial settings 16

F

Favorite list
saving 65
viewing 66
flat-type earphone microphone **71**
FM radio **70**
listening 72
suspending/ending 74
switching speaker 73

I

icons **15**
ID unsent **22**
idle display **11, 15**
incoming indicator **9**
incoming ring
tone 26
volume 26
Index menu **14**
infrared data exchange feature **75**
authentication password 77, 78
receiving 78
sending 77
initial settings **16**
Internet (See "EZweb")

K

key operation **12**

M

mail
- C-mail 47
- e-mail 37

mail filter **46**
manner mode **3, 28**
movie
- attaching to e-mail 60
- recording 56
- saving 57
- viewing 59

N

names of parts **9**

O

one-ring call **5, 24**
- icon 24

P

phone book **31**
- editing saved data 34
- making a call 33
- saving new data 31
- saving received call 36

photo
- attaching to e-mail 60
- saving 55
- taking 54
- viewing 58

Photo mail **61**
playing back
- movie 59
- photo 58
- record message 30

power **3, 11**

Q

quick display **9, 15**

R

Received display **23**
- icons 23

reception **3, 11**
record message **3, 29**
- playing back 30

redialing
- number you called 23
- number you received 23

S

sites **63**
soft key **12**
spam **5, 46**
switching speaker **73**

T

Text input **79**
- alphanumerics 80
- changing character mode 79
- character key assignment table 80
- characters assigned to the same key ... 81
- deleting characters 81
- icons 82
- phrases 82
- uppercase 81

troubleshooting **83**

V

volume during a call **25**

Y

your e-mail address
- changing 18
- confirming 17

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

フリーコール **0077-7-111**

(toll free)

From au cellphones:

157 area code not required

(toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.

古紙配合率100%再生紙を使用しています

モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♲ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales : KDDI Corporation
Okinawa Cellular Telephone Company

Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.

A-CH8-100-11(1)
June 2005, 1st Edition

Access to au online manual